

Limit switch adjustment instructions

Note: In principle, we do not recommend the guests to adjust the limit switch, because the improper adjustment might damage the product and affect the surface flatness of the screen.


Limit switch adjustment tool: Limit rods(Hexagonal wrench),diameter 4mm



Screen Limit Switch Description: At the same side with power cord, find the upper and lower limit adjustment holes (as the picture showed below)



lower limit adjustment holes with a warning sticker on

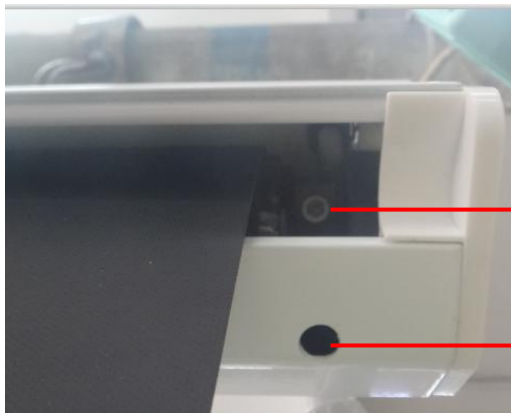


upper limit adjustment holes

lower limit adjustment holes

Specific operation methods are as follows:

The adjust method of screen is not completely retract: put the limit rods into the upper limit adjustment holes, rotating it in counterclockwise direction.

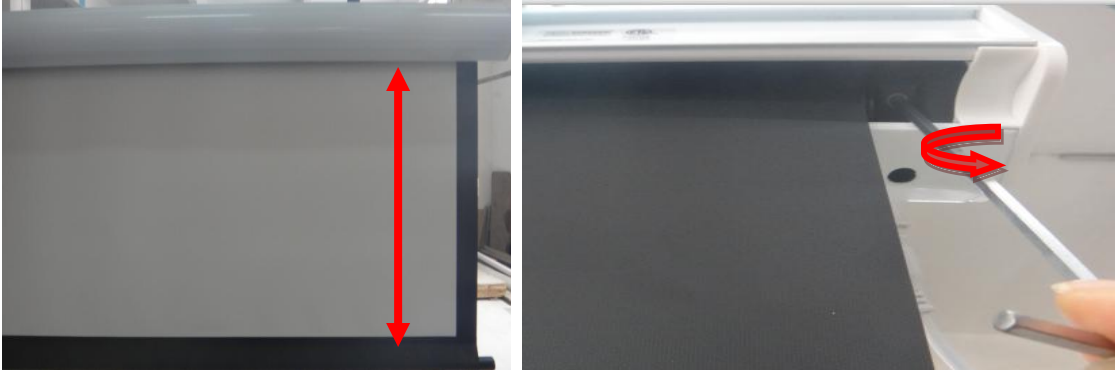

The adjust method of screen doesn't stop retracting: put the limit rods into the upper limit adjustment holes, rotating it in clockwise direction.



The adjust method of increasing the length of the top black drop: put the limit rods into the lower limit adjustment holes, rotating it in counterclockwise direction.



Increasing the length of the top black drop up to one circle.

The adjust method of reducing the length of the top black drop:

1

Use the remote to control the screen completely down.

2.

Put the limit rods into the lower limit adjustment holes, rotating it in clockwise direction.

